



speedtrap protection for high-performance cars

# Stinger system user manual

## Legality

Within the USA and Canada, individual states and provinces sometimes have their own, unique regulations regarding drivers being alerted to, and protected from, speedtraps. Depending on the jurisdiction, citizens may or may not have the freedom to receive information concerning speedtraps and to be alerted accordingly. In some states/provinces citizens do not have the liberty to freely pick up radar signals, while in most others they do. Also the freedom to receive or block the information from laser speedtrap guns may differ per territory.

In order to offer products to car drivers throughout the USA and Canada, Stinger, in certain markets, only supplies versions of the Stinger system that are incapable of performing certain functionalities. Radar Alerting, Laser Alerting, LaserShield®, and SpotList may not be available on those versions.

Please remember that it is and always will be your personal responsibility to be aware of and abide by local laws. Therefore, please thoroughly check local legislation before first using your Stinger. If you are driving in a state/province where you do have the freedom to use Radar Alerting and/or Laser Alerting and/or LaserShielding and/or SpotList Alerting, you can download and install the software appropriate for that region.

Of course you can later delete this (new) functionality, in order to easily and completely stay in compliance with local legislation whenever entering a jurisdiction that does not allow one or more of the above mentioned functionalities. Erasing ensures that your Stinger System is incapable of Radar Alerting, Laser Alerting, LaserShield®, and sometimes SpotList Alerting. A new software download (available where allowed) and installation are required in order to once again change the version of your Stinger system.

Please be aware that all features and functionalities described in this manual are subject to the presence of the corresponding hardware modules.

Note: Under no circumstance does your Stinger constitute a license to exceed the posted speed limits. Alerts from your Stinger serve as an effective reminder to mind your speed. Always drive responsibly and pay full attention to traffic.

Importantly, please note that our User Agreement - to be found on [stinger.com](http://stinger.com) - applies to the use of all Stinger products.

## Safety Instructions

### Important: Read carefully, prior to operating the laser

Do not connect any third party modules to any part of the Stinger system. Doing so may cause fire or damage to the unit, and voids warranty.

### Special Caution

The Stinger Laser Transmitter can transmit a laser beam. We advise to never, under any circumstances, look at the sensor while it is operating and/or is connected to a power supply, especially not from up close or through any kind of optical lenses.

### Maintenance

The Stinger system is basically maintenance free, however, you should check periodically that any radar fronts as well as the lenses on any outer optical sensors are clean. You can gently clean them with any water based means or by using a simple wipe.

## Contact & Support Information

For more information, video tutorials,  
and updates for your Stinger, go to  
[stinger.com/getstarted](https://stinger.com/getstarted)



If, at any point, you have questions regarding  
your Stinger or a Stinger dealer, please contact:

### **Sales & Service: USA**

MSC America  
(480) 372 - 2929  
[msc-america.com](https://msc-america.com)  
[sales@msc-america.com](mailto:sales@msc-america.com)

### **Sales & Service: Canada**

Mobile Solutions of Canada  
(403) 698 - 3695  
[mobilesolutions-canada.com](https://mobilesolutions-canada.com)  
[sales@mobilesolutions-canada.com](mailto:sales@mobilesolutions-canada.com)

### **General: United States & Canada**

Carcomputer USA, Inc  
(727) 292 - 1887  
[stinger.com/us](https://stinger.com/us)  
[stinger@carcomputerusa.com](mailto:stinger@carcomputerusa.com)

# Welcome Stinger user

We appreciate you have chosen us for the protection of your performance vehicle. It's our goal and pleasure to help you enjoy driving in as much freedom and safety as possible, so please let us know if there is any way in which we can improve your Stinger experience.

We think you'll find the Stinger system offers the best all-around speedtrap protection out there, and combines that with the most discrete design as well as an intuitive user interface display. To maximize your driving pleasure, please take a little time to read this manual. A Stinger system can be used with either a Strip display (for optimum discretion and simplicity) or a View display (for maximum control), so make sure to read the section that shows your display of choice.

Thank you for going with Stinger!

## Contents

1. Keeping your Stinger system up to to date	4
2. Stinger with Strip display	5
3. Stinger with View display	12

## 1. Keeping your Stinger up-to-date

To optimally benefit from your Stinger system we suggest you use the Stinger Desktop application on your Mac or PC to check for updates at least every other month.

1. When you start using your new Stinger USB Key for the first time, please connect it to the USB port of your active Stinger and start your car in order to 'match' them.
2. Then connect the USB Key to your Mac or PC.
3. Launch the Stinger Desktop application on your Mac or PC. It will automatically check for any available updates to your Stinger. If you have not yet installed the Stinger Desktop application on your Mac or PC, you can download it from [us.stinger.com/updates-and-software](https://us.stinger.com/updates-and-software)
4. Follow the instructions of the Stinger Desktop application to load the updates onto the USB Key.
5. Next, take the USB Key to your car and connect it to the USB port of your Stinger.
6. Turn your Stinger on. The updates on the Strip display will start automatically after connecting. On the View display, follow the installation instructions. **Make sure the installation will not be interrupted!**



## 2. Stinger with Strip display




### Contents

2.1 Basic use	5
2.2 Alert types	6
2.3 Erasing LaserShield® and Laser/Radar Alerting	9
2.4 SafetySignals	10
2.5 Suppression of false alerts	10
2.6 Switching off your Stinger	10
2.7 Changing Settings	11

**Note:** Functionalities may differ depending on the software version, installed hardware modules, and/or the region you are in.

### 2.1 Basic use

Operating your Stinger system with a Strip display is elegant and simple. It will automatically turn on when you start your car.

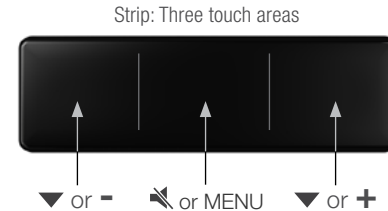








The Strip will blink green during start up. Your Stinger system is fully operational once the Strip is solid green.



The color-coded alerts make driving with Strip very straightforward: Green means 'relax', yellow means 'suppressed alert' or a SafetySignal, red means 'full alert'.

## 2.2 Alert types

Depending on the hardware and software configuration of your Stinger system, it can protect against various types of speedtraps.

Stinger system with:	Protection against speed trap type:			
	Induction loops	Section	Laser based	Radar based
Laser only	✗	✗	✓	✗
Radar only	✓	✓	✗	✓
Laser and Radar	✓	✓	✓	✓
	 Speed	 Section control	 Lasergun	 On tripod
	 Red light		 Side laser	 In car
				 Fixed radar
				 Radar gun

### 2.2a Spot

With the help of GPS technology your Stinger will alert you for fixed speedtrap installations (such as posts with induction loops, or radar installations)\* that we call 'Spots'. Stinger has mapped the locations of nearly all fixed speedtrap installations in the U.S.A and Canada and distributes these to its users in the form of a so-called 'SpotList'.

Whenever you approach a SpotList location, your Strip will blink red and an audio alert will be played. The faster the audio alert beeps, the closer you are to the fixed speed trap.



Your Strip will blink red when you approach a SpotList location.

\*Not available on Laser Only systems.

## 2.2b Section

Section Alerting will warn you for, and guide you through, section controls (a.k.a. *SPECS* or *automated VASCAR*). With section control, cameras (regardless of your speed) register your vehicle at point 'A' and then again at point 'B' (often at least half a mile apart). A computer then automatically calculates your average speed between points 'A' and 'B' and issues a ticket if your average speed is higher than the posted speed limit.

With your Stinger, you will effortlessly be guided through section controls.

---

### Approaching Section

---

When you are approaching a section control, your Strip will blink yellow and your Stinger will play an audio alert.



Your Strip will blink yellow when you approach a section control location.

---

### During Section

---

When you enter the section control, you'll get another audio alert. As long as your average speed is under or on the speed limit, your Strip will keep blinking yellow.

However, anytime your average speed exceeds the speed limit, your Strip will blink red and an audio alert is played. Lower your driving speed to get your average down. When your average speed is back on the speed limit, the audio alert stops and the Strip will blink yellow again.



Within a section control your Strip will blink red any time your average speed exceeds the limit.

## 2.2c Laser

Your Stinger can expertly protect you against laser speedtraps\*. In such traps, a handheld device or fixed installation is used to fire laser light towards your car to determine your speed.

### Laser Alerting\*

Your Stinger can instantly see a laser being fired at you, often already when cars ahead of you are being targeted, and immediately alert you with both audio and visual warnings:



When laser is detected, Strip will blink yellow or red.

### Sound

While getting an alert, you can mute the sound by tapping the middle touch area:



**TIP:** if LaserShield is up, 'mute' will also instantly kill the LaserShield.

\*Optional: available where allowed

## LaserShield®\*

When being fired at with laser, your Stinger can instantly deploy a shield of invisible light: LaserShield®. It can (temporarily) make it virtually impossible for laser guns to measure your speed.

Your Stinger's LaserShield® is so advanced that even modern side-lasers (positioned next to the road, for instance installed into the guard rail) can be effectively blocked (optional Stinger Side Laser required).



When laser is detected and LaserShield® is up, Strip will light up solid red.

### Shield-up time

LaserShield® will stay up for a default time of 4 seconds after the initial alert. After this so called Shield-up time runs out, the shield will automatically go down, allowing law enforcement a 'second shot' at measuring your speed. At speeds below 30 km/h or ca. 20 mph, the Shield will always be down.

**TIP:** the Shield-up time is adjustable in the Settings menu.

## 2.2d Radar

Radar based speedtraps determine your speed using radio waves. In North America, such traps usually consist of a handheld radar gun, or one mounted in a (stationary or moving) police vehicle. They can also be part of a fixed installation such as in a cabinet next to or above the road. In recent years, the USA and Canada have even been seeing the appearance of modern, European style photoradars that can automatically snap your picture. Fortunately, the unique radar antenna of your Stinger system can expertly find the radio waves emitted by any of these types of speed traps.\*

When your Stinger recognizes a radar source, your Strip will blink red and will play an audio alert.



When radar is detected, Strip will blink red (or yellow when considered false).

### Sound

While getting an alert, you can mute or adjust the volume:



## 2.3 Erasing LaserShield and Laser/Radar Alerting

Within the U.S.A. and Canada, different regions sometimes have their own, unique regulations when it comes to drivers being alerted for - or protected from - speed traps. Always thoroughly check local legislation before using your Stinger system. Please remember it is your responsibility to know, and abide by, the law.

You can erase Laser Alerting, LaserShielding and Radar Alerting in order to stay in compliance with local legislation whenever entering a country or region that limits your freedom to protect yourself from speed traps and other surveillance.

Erasing on your Strip is achieved by simultaneously holding - and + for around 5 seconds. After you have heard the “swiping” sound as a confirmation, the above mentioned functionalities have been deleted from your Stinger system.

A new software download (available where allowed) and installation are required in order to re-install functionalities.



Simultaneously hold both - and + for around 5 seconds to erase functionalities.

\*Optional: available where allowed

## 2.4 SafetySignals

Your Stinger incorporates an ingenious safety system. At great distances it picks up SafetySignals that can be transmitted around work zones, school zones and emergency vehicles. These signals will be transcoded in real-time and trigger the appropriate alert. This way your Stinger can alert you up to a mile ahead for special traffic situations. Depending on the application, there are several ways a SafetySignal can be generated.

Cars equipped with Stinger Laser can even automatically and instantly alert other - Stinger Laser equipped - cars to dangerous situations such as heavily braking traffic.



When a SafetySignal is being received, Strip will blink yellow.

## 2.5 Suppression of false alerts

### *SpeedSense*

This function eliminates unnecessary alerts when driving below a certain speed (pre-set at ca. 20 mph). To change this value, check chapter 2.7 *Changing Settings*.

### *FalseList\**

While getting a false alert, hold the + area on the right of the Strip for around 3 seconds to store that specific signal at that specific location in the FalseList of your Stinger, or just wait for the system to auto learn. Either way, your Stinger system will get quieter and quieter over time.



Hold the + for around 3 seconds to immediately add a false alert to the FalseList

## 2.6 Switching off your Stinger

Your Stinger will automatically turn on and off with your car. If you want to manually switch it off, press the MENU button until you hear 'goodbye' or the swipe sound.

**ATTENTION:** Your Stinger will not be turned on automatically upon starting your car if you have switched off the system manually. You will have to manually turn it back on by touching the MENU button.

\*Optional: available where allowed

## 2.7 Changing Settings

The Strip menu is voice guided. To enter it, just touch the **MENU** button area (except when your Strip is displaying an alert). The Strip will then light up white.



By repeatedly pressing the **MENU** button you can select the various **Settings**, as indicated by the voice guidance. The order of the Settings and the accompanying **Options** are in the overview on the right.

With the **DOWN** and **UP** buttons you can cycle through the **Options** for each setting.

After changing a setting, press the **MENU** button again to confirm and go to the next setting.

After about 8 seconds of inactivity, or at the end of the menu settings, you will automatically leave the Settings Menu.

### The Settings menu

Settings	Options
Radar X	On or off
Radar K	On or off
Radar low power only	On or off
Radar Ka	On or off
Automatic Falselist	On or off
Laser mode	Receive only (only Laser Alerts, no Shield) or Receive and Shield.
Shield-up time	Number of seconds the LaserShield will remain up when triggered.
Side protection	When Side Laser Protection is installed, you can turn the Side-Shield on or off.
Units	Kilometers or miles.
SpeedSense	Set the speed under which your Stinger won't play audible alerts.
Brightness	Set the brightness of the Strip's backlight.
Dark mode	Turns off the backlight of the Strip except for when getting an alert.
Start-up sound	Enable or disable the start-up and the shutdown sound.
Versions	Tells the installed software version(s).

**Note:** settings may differ depending on the software version, installed hardware modules, and/or the region you are in.

# 3. Stinger with View display




## Contents

3.1 Basic use and Settings	12
3.2 Alert types	14
3.3 Erasing LaserShield® and Laser/Radar Alerting	18
3.4 Suppression of false alerts	18
3.5 SafetySignals	19
3.6 PoliceCheck	19
3.7 Mileage Log	20
3.8 Switching off your Stinger	20

**Note:** Functionalities may differ depending on the software version, installed hardware modules, and/or the region you are in.


## 3.1 Basic use and Settings

Your View display provides fast and full control over your Stinger. It will automatically start up each time you turn on the ignition of your car and shut down when you turn the ignition off again. Clear, color-coded alerts make driving with your Stinger pleasurable and straightforward: Green means ‘relax’, yellow ‘suppressed alert’ and red ‘full alert’.

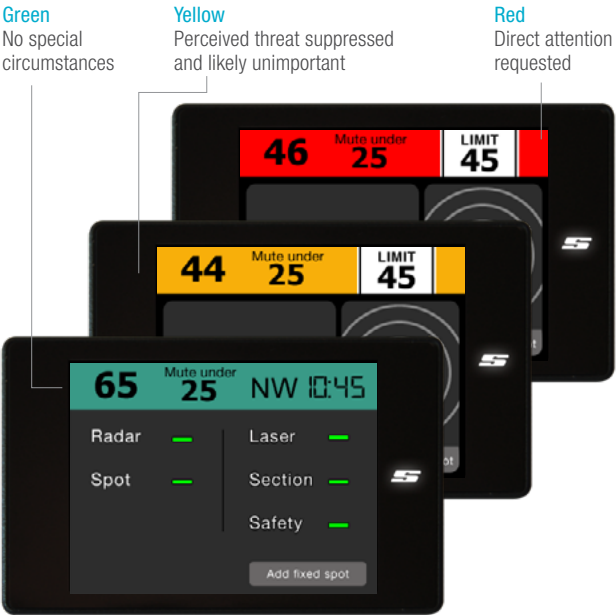


After start-up your View will take you to the Pilot screen: the standard operating screen.

For any further interaction you can use the touch display. At any time, pressing the Stinger S-key will take you directly to the Main menu.

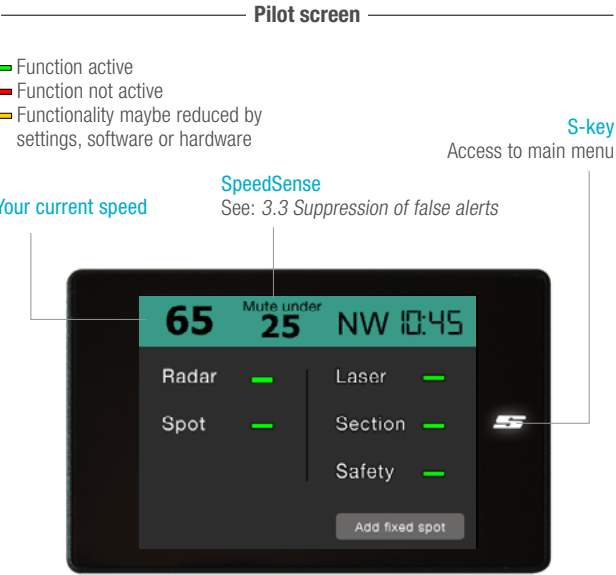





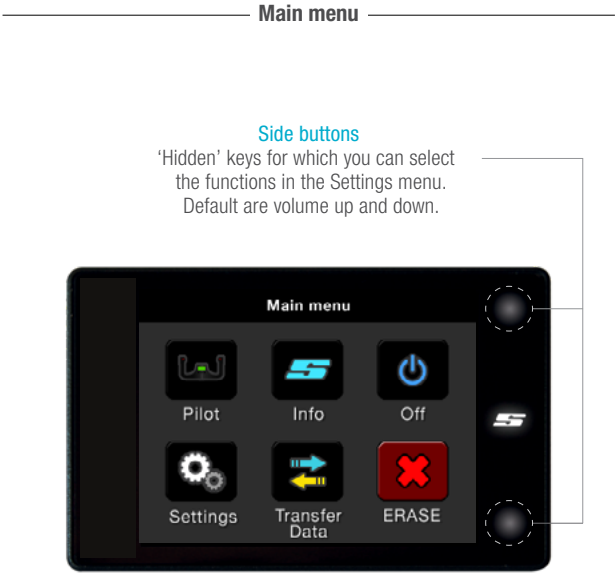




In the Main menu you can proceed to the Settings menu where you can change settings such as volume, alert behavior, brightness, time, language, kilometer/miles, side buttons and SpeedSense.

From the Main menu simply press the 'Pilot' icon to return to the Pilot screen.



# 3.2 Alert types

Depending on the hardware and software configuration of your Stinger system, it can protect against various types of speedtraps.

Stinger system with:	Protection against speed trap type:			
	Induction loops	Section	Laser based	Radar based
Laser only	✗	✗	✓	✗
Radar only	✓	✓	✗	✓
Laser and Radar	✓	✓	✓	✓
	 Speed   Red light	 Section control	 Lasergun   Side laser	 On tripod   In car   Fixed radar   Radar gun

## 3.2a Spot

With the help of GPS technology your Stinger will alert you for fixed speedtrap installations (such as posts with induction loops, and radar installations) that we call 'Spots'. Stinger has mapped the locations of nearly all fixed speedtrap installations in the U.S.A and Canada and distributes these to its users in the form of a so-called 'SpotList'.

Whenever you approach a location that's in the Stinger SpotList, your View will show you the following type of alert screen:

### Spot alert

Alerts will start ca. 15 seconds ahead of a spot.

### Your current speed


Your GPS speed (usually more accurate than that of the car's speedometer).

### Limit

The stored speed limit for that location.\*

### Target view

Indicates the relative proximity of the fixed installation.

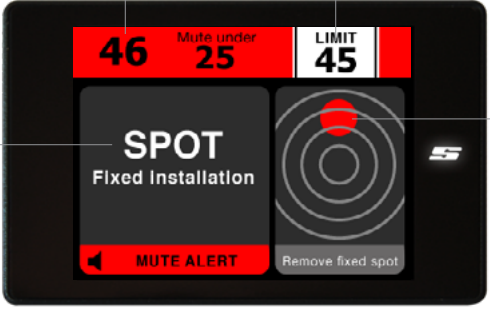

\* Stored limit might not always correspond with the actual speed limit

### 3.2b Section

Section Alerting will warn you for, and guide you through, section controls (a.k.a. *SPECS* or *automated VASCAR*). With section control, cameras (regardless of your speed) register your vehicle at point 'A' and then again at point 'B' (often at least half a mile apart). A computer then automatically calculates your average speed between points 'A' and 'B' and issues a ticket if your average speed is higher than the posted speed limit.

With the clear information of your View, you will effortlessly be guided through section controls.


#### Approaching Section

##### Alert

You will get an initial alert when approaching the section.

##### Limit

The set speed limit for the section. You can change the limit set by your Stinger by pressing the speed limit sign.

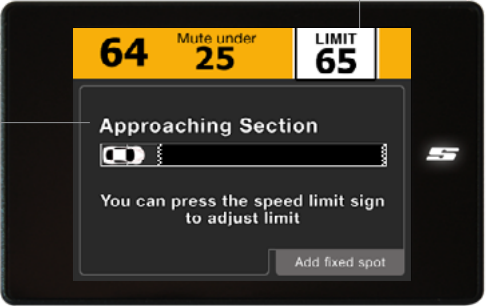


#### During Section

##### Average speed

Your real-time average speed through the Section so far.

##### Section length


Your position within the Section shown graphically and in numbers.

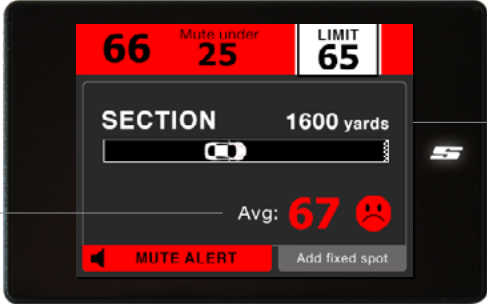

#### End of Section

##### Average speed

Your final average speed over the completed Section. If you have complied with the speed limit, a green 'smiley face' will be shown. If you have been speeding, a red 'sad face' will be shown and you'll hear the sound of a camera shutter.

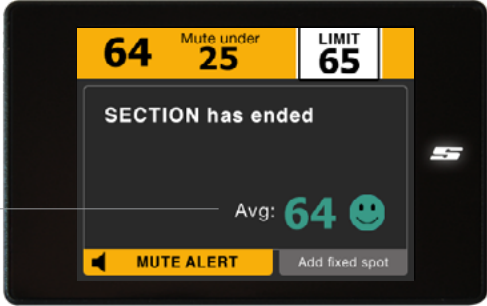

### 3.2c Laser

Your Stinger can expertly protect you against laser speedtraps\*. In such traps, a handheld device or fixed installation is used to fire laser light towards your car to determine your speed.

#### Laser Alerting\*

The Laser Alerting functionality allows your Stinger to instantly see when laser hits your vehicle, often already when cars ahead of you are being targeted. In your car you will be alerted with clear visual and audible warnings.


#### Laser Alerting

##### Alerts

The moment your Stinger identifies laser light it will display an alert like below. Even the type of laser device can be shown.

##### Target view

A visual representation of the beam indicating the direction of the laser gun.\*\*

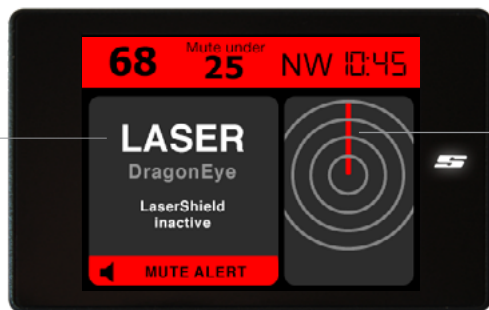

#### LaserShield®\*

When being fired at with laser, your View can instantly deploy a shield of invisible light: the LaserShield®. It will (temporarily) make it virtually impossible for laser guns to measure your speed.


Your Stinger's LaserShield® is so advanced that even modern side-lasers (positioned next to the road, for instance installed into the guard rail) can be effectively blocked (optional Stinger Side Laser required).

#### LaserShield®

##### Shield-up time

Upon the initial alert, the LaserShield® will remain active for a number of seconds that can be set under *Settings > Laser > Shield-up time*. After that Shield-up time the shield will automatically go down, allowing law enforcement a 'second shot' at measuring your speed. At speeds below ca. 20mph the shield will always be down.

**Tip:** Touching (near) the Shield icon immediately drops your LaserShield®.

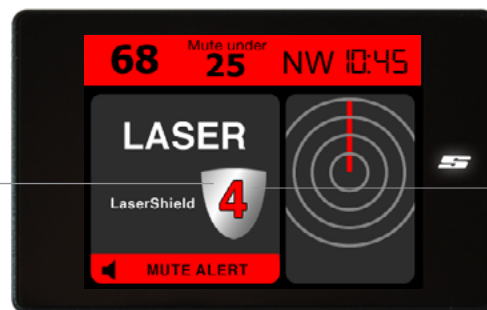

##### Shield active indicator

Showing countdown timer. Also the 'touch-to-kill' area.

\* Optional: available where allowed

\*\* Requires installation of front and rear Lasers on your car

### 3.2d Radar

Radar based speedtraps determine your speed using radio waves. In North America, such traps usually consist of a handheld radar gun, or one mounted in a (stationary or moving) police vehicle. They can also be part of a fixed installation such as in a cabinet next to or above the road. In recent years, the USA and Canada have even been seeing the appearance of modern, European style photoradars that can automatically snap your picture.

#### Radar Alerting

##### Band and Frequency


Name of the frequency band (such as K and Ka) as well as the exact frequency.

##### Target view

Indicates whether radar originates from ahead, the side, or the rear.\*\*

##### Signal Strength

Signal strength indication displayed on a scale of 1 to 10. The higher the strength, the closer the relative vicinity of the radar.

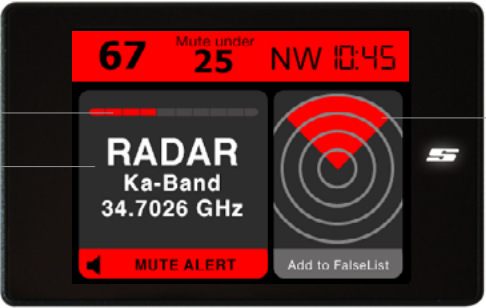


Fortunately, the unique radar antenna of your Stinger system can expertly find the radio waves emitted by any of these types of speed traps.\*

The extreme accuracy of your Stinger is also evident in the Spectrum Analysis screen. Go to 'settings' to select it as your default screen or to define it as a toggle key.

#### Spectrum Analysis

##### 3D Graph

Analysis of the X, K and Ka bands can be shown simultaneously. The horizontal axis indicates the relative frequency, the vertical axis the relative signal strength.

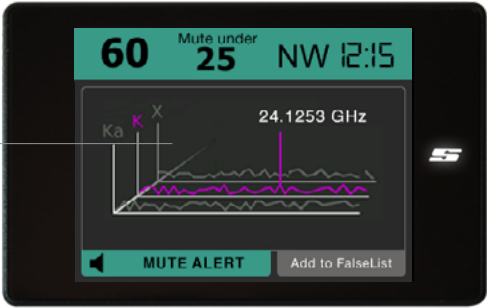

\* Optional: available where allowed

\*\* Requires installation of front and rear radar antennas on your car

### 3.3 Erasing LaserShield® and Laser/Radar Alerting

Within the U.S.A. and Canada different regions sometimes have their own, unique regulations when it comes to drivers being alerted for - or protected from - speedtraps. Always thoroughly check local legislation before first using your Stinger. Please remember it is your responsibility to know, and abide by, the law.

You can erase Laser Alerting, LaserShielding and Radar Alerting in order to stay in compliance with local legislation whenever entering a country or region that limits your freedom to protect yourself from speed traps and other surveillance.

Erasing is achieved by first pressing the 'S' key. In the subsequent screen simply choose the ERASE button. This will render your Stinger incapable of Radar Alerting, Laser Alerting, LaserShield®, and - depending on region - SpotList Alerting.

A new software download (available where allowed) and installation are required in order to re-install functionalities.

#### FalseList

If you prefer for a specific alert to stay muted subsequent times you drive by its location (irrespective of the speed you will be going), press the *Add to FalseList* area.

### 3.4 Suppression of false alerts

#### SpeedSense


This function offers an easy way to eliminate unnecessary alerts. Simply activate a threshold speed under which your Stinger will automatically mute all alerts. Just press the *Mute Under* area to choose a speed threshold.

#### FalseList\*

Whenever you receive a false alert, tap the *Add to FalseList* area to immediately store that specific signal at that specific location in the FalseList of your Stinger, or just wait for the system to auto learn. Either way, your Stinger system will get quieter and quieter over time.

#### SpeedSense


Example: You are driving 26 mph and therefore below the SpeedSense threshold of 35 mph. A Radar Alert will therefore stay muted.

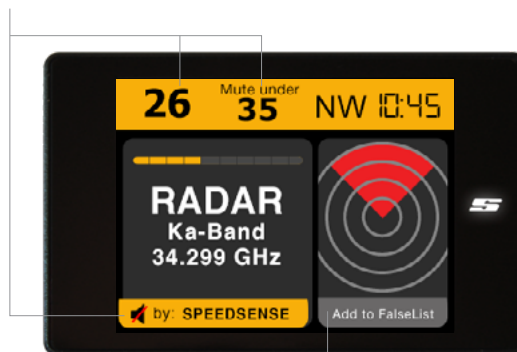

### 3.5 SafetySignals

Your Stinger incorporates an ingenious safety system. At great distances it picks up SafetySignals that can be transmitted around work zones, school zones and emergency vehicles. These signals will be transcoded in real-time and trigger the appropriate alert. This way your Stinger can alert you up to a mile ahead for special traffic situations. Depending on the application, there are several ways a SafetySignal can be generated.

Cars equipped with Stinger Laser can automatically and instantly alert other - Stinger Laser equipped - cars to dangerous situations such as heavily braking traffic.

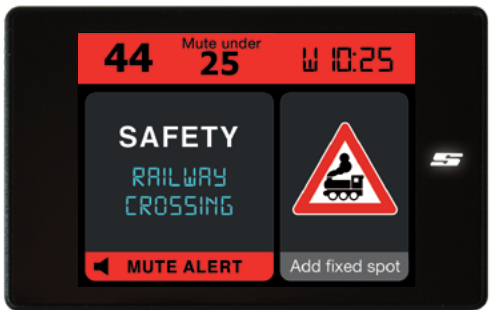

### 3.6 PoliceCheck

This unique Stinger feature can help you dispute unjust or incorrect traffic citations. With PoliceCheck switched on (*Main Menu > Settings > PoliceCheck*), your Stinger will automatically log encounters of radar, laser and other types of speedtraps. Of those moments it will also log additional data, including essential details such as time, location, your speed, and type of laser or frequency of radar device. That enables you, for instance, to later check if the radar in question has been operating within legal bandwidths.

In the Stinger Desktop application you can retroactively look up, store and print all the collected data.

A screenshot of the Stinger Desktop application interface. The top bar is blue with the 'STINGER' logo on the left and a search bar on the right. Below the bar, the left sidebar shows 'STINGER DEVICE' with 'Stinger Key' selected, and 'DATABASE' with 'MileageLog' and 'PoliceCheck' listed. The main area displays a table of PoliceCheck records. The table has columns: Record #, Date, Trip #, Time, Trap type, Speed (mph), and Trap details. The data shows 18 records, mostly from 15-03-2012, with various trap types like Radar, Spotlat, and No CPS, and speeds ranging from 35.0 to 60.0 mph. The last record is from 19-03-2012.

Record #	Date	Trip #	Time	Trap type	Speed (mph)	Trap details
1	15-03-2012	2	16:48:42	Radar	35.0	24.181 GHz A
2	15-03-2012	2	16:48:42	Radar	38.0	24.120 GHz A
3	15-03-2012	2	16:48:42	Radar	38.0	24.198 GHz A
4	15-03-2012	2	16:48:42	Radar	35.0	24.113 GHz A
5	15-03-2012	2	16:50:26	Radar	46.0	24.125 GHz A
6	15-03-2012	2	16:56:52	Radar	48.0	24.134 GHz A
7	15-03-2012	2	16:59:58	Radar	60.0	24.143 GHz A
8	No CPS	3		Radar		24.140 GHz A
9	No CPS	3		Radar		24.188 GHz A
10	No CPS	3		Radar		24.204 GHz A
11	No CPS	3		Radar		24.195 GHz A
12	15-03-2012	3	23:35:10	Spotlat	50.0	
13	15-03-2012	3	23:35:24	Spotlat	46.0	
14	15-03-2012	3	23:35:48	Spotlat	53.0	
15	19-03-2012	3	23:37:00	Radar	46.0	24.181 GHz A

\* Optional: available where allowed

### 3.7 Mileage Log


To assist with someone's hourly billing or travel cost administration, and in some regions even to help avoid extra governmental taxes, your Stinger can keep detailed track of all your business and private car travel.

At the start of any trip you simply choose the trip type (Business, Private or Commute) or simply let it default. To register trip 'interruptions' like gas and food stops you just choose 'Pitstop' when resuming your trip.

With the supplied Stinger USB Key it is simple to transfer your MileageLogging information to the Stinger Desktop application on your Mac or PC and further manage the data.

**Tip 1:** In order to safeguard your Mileage Log data, we advise you to upload it to your Mac or PC on a monthly basis.

**Tip 2:** If you leave your USB Key hooked up to your Stinger in your car, a back-up of your Mileage Log and PoliceCheck data will automatically be saved on your USB Key.

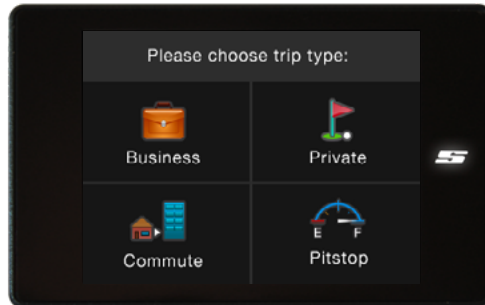

### 3.8 Switching off your Stinger

Your Stinger will automatically turn on and off along with your car. If you want to manually switch it off, press the Stinger 'S' and press 'OFF'.

**ATTENTION:** Your Stinger will not be turned on automatically upon starting your car if you have switched off the system manually. You will have to manually turn it back on by pressing the Stinger 'S'.

## **FCC information**

### **FCC compliance statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modification of this device may void the user's authority to operate the equipment under the FCC rules.

### **Canadian regulatory statement**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC ID: 2ABKP-VIP201412

---



The relevant modules of this product comply with U.S. 21 CFR 1040.10 with deviations pursuant to Laser Notice no. 50 and with EN IEC 60825-1 (2007).

***STINGER***

speedtrap protection for high-performance cars